

4. TRANSFER AND INSTALLATION

4.1 Installation Environment

▲ CAUTION

- ◆ Provide a service space of at least 1 m around the DMT-30E.

Meet the following requirements for the installation environment:

- The installation site shall be horizontal.
- There shall be no vibration source near the DMT-30E.
- The DMT-30E shall not be significantly affected with direct sunlight and other heat-related factors.
- The operating temperature shall be 10 degree to 40 degree.
While stock situation and transportation shall be 0 degree to 60 degree.
- The humidity shall be 40% to 75% at 20 degree.
- Under altitude 2000m.

The installation floor shall be made of concrete.

- The following floor plan shall be taken into consideration.
- If the machine is operated in high ambient temperature, there is a chance to cause some troubles on devices in control box. It is better to keep the ambient temperature not higher than 40 degree.

